


PRIOR TO METERS BEING INSTALLED, THE PROPERTY LINES AND BACK OF SIDEWALK ARE TO BE STAKED. IF METER BOXES OR SANITARY CLEAN OUTS LIE WITHIN THE SIDEWALKS OR DRIVEWAYS, THEY ARE TO BE EXTENDED TO UNPAVED AREAS, AS CLOSE TO THE PROPERTY LINES AND SIDEWALK AS POSSIBLE. ALL METER BOXES SHALL BE ORIENTED PER DETAIL TWA-01, TWA-01.1 AND TWA-02. SANITARY CLEAN OUT PADS PARALLEL TO THE SIDEWALK AT FINISHED GRADE. EXISTING FIRE HYDRANTS, AUTOMATIC FLUSHING DEVICES OR VALVES ARE TO BE MAINTAINED AT FINISHED GRADE WITHIN THE PROPERTY LINES TO THE CURB. (SEE STANDARD DETAILS FOR WATER AND SEWER INSTALLATIONS).

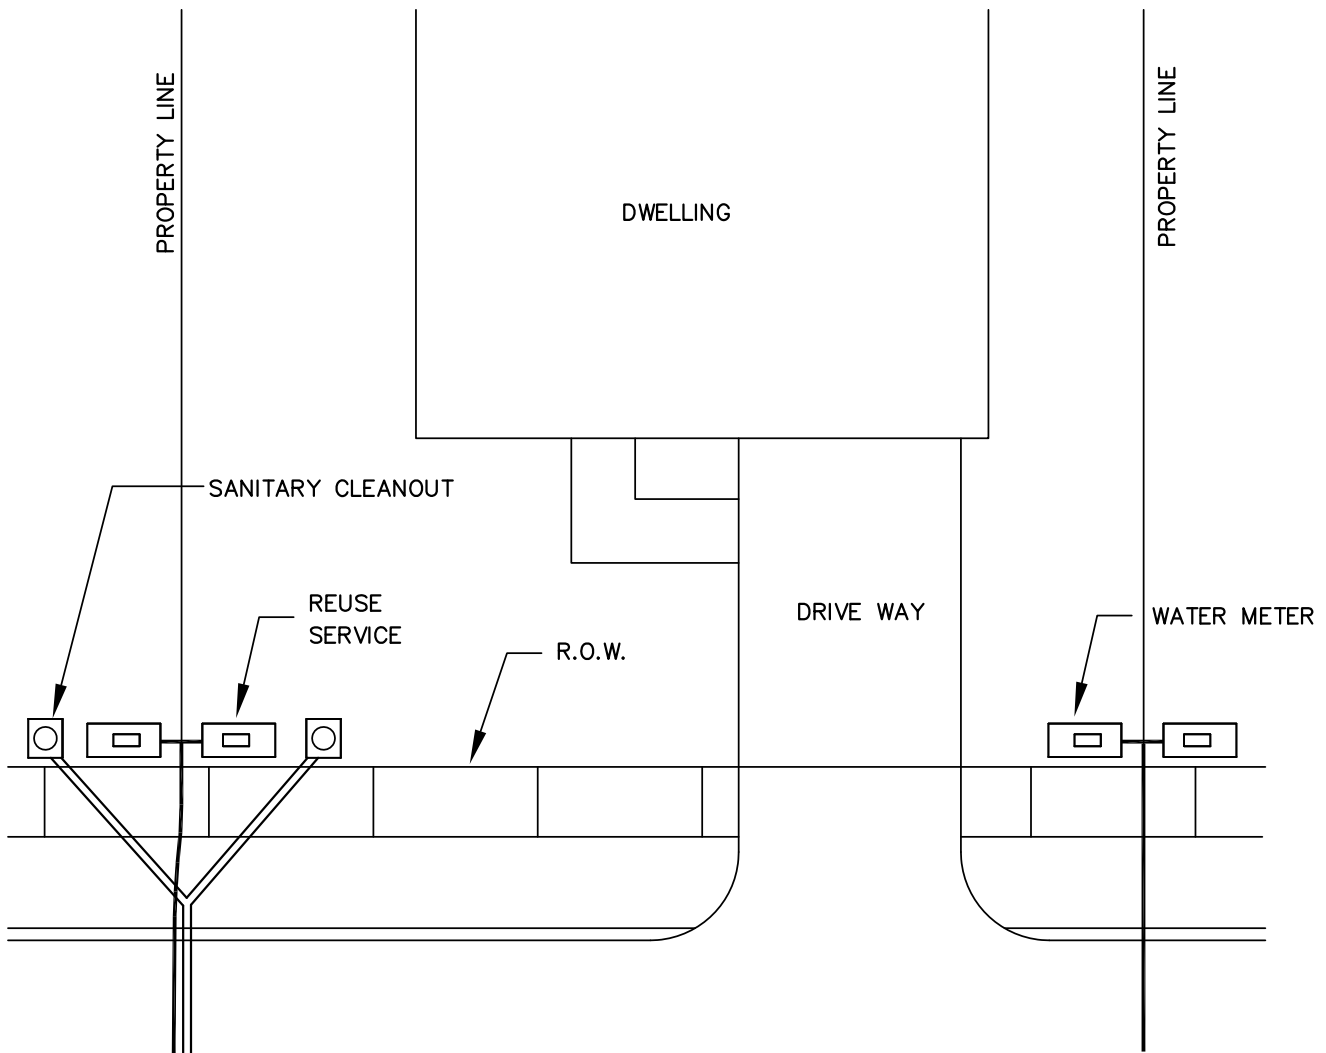

WATER, SEWER & REUSE SERVICE LOCATION

TWA-28
2009